


# ***Shark***

## **FlexBreeze HydroGo Fan**

### **FA050UK Series**

#### **OWNER'S GUIDE**

---

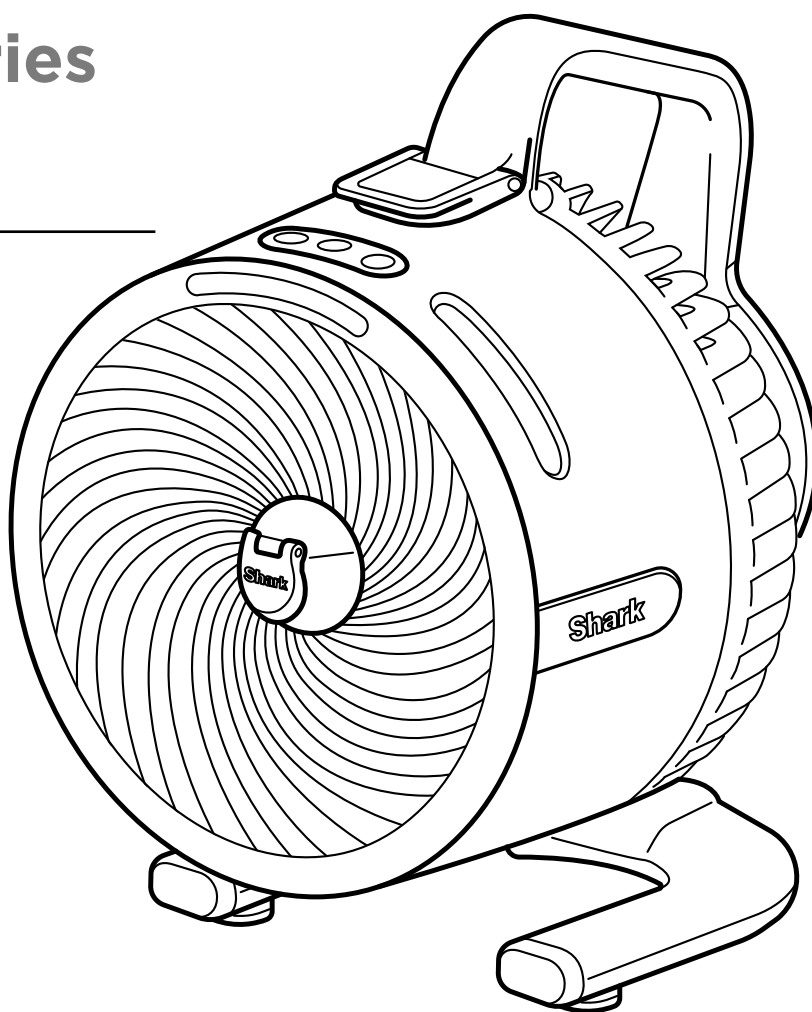

# IMPORTANT SAFETY INSTRUCTIONS

SUITABLE FOR OUTDOOR USE. SUITABLE FOR HOUSEHOLD USE ONLY.




**NOTE:** Before every use, empty and rinse the water tank to prevent stagnant water from being misted.

## WARNING

**TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY: READ ALL THESE INSTRUCTIONS BEFORE USE.**

1. This appliance is operated by a rechargeable battery. **ONLY** recharge the battery with the charger supplied with the unit, battery charger for use only with model GQ36-120300-ABO power supply from Dongguan Gangqi Electronics Co., Ltd. or with model AJJ3-1 from Anlian. A charger that may be suitable for one type of battery may create a risk of fire when used with another battery.
2. **DO NOT** attempt to destroy, remove, or disassemble the battery pack from the machine. **DO NOT** incinerate battery cells. Consult your local waste authority for information regarding available recycling and/or disposal options.
3. To reduce the risk of an electric shock, connect only to an outlet provided with a Residual Current Device (RCD).
4. The fan should be used on a stable and level surface.
5. Never use this fan near pools, bathtubs, showers, basins, or other vessels containing water.
6. **DO NOT** operate any unit with a damaged power supply wire or battery charger. Discard the unit or return to an authorised service facility for examination and/or repair.
7. **DO NOT** run cord under carpeting. **DO NOT** cover charge cord with throw rugs, runners, or similar coverings. **DO NOT** route charger cord under furniture or appliances. Keep charger cord away from high-traffic areas. Place charger in an area where the cord will not be tripped over.
8. If the charger cord is damaged, it should be replaced.
9. This appliance is not intended for use by anyone (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
10. Children should be supervised to ensure that they **DO NOT** play with the appliance.
11. Cleaning and user maintenance shall not be made by children without supervision.
12. Prior to cleaning or other maintenance, the appliance must be unplugged from the electrical outlet.
13. Only use Shark branded accessories.
14. **DO NOT** use if appliance is not working as it should, has been damaged, or dropped into water.
15. Turn off all controls before plugging in or unplugging the appliance.
16. Unplug from electrical outlet when not in use and before any maintenance or cleaning.
17. Hand wash exterior/hard plastic/non-electronic parts with a damp cloth and water only. **DO NOT** immerse. Cleaning with chemicals could damage the unit.
18. **DO NOT** attempt to repair or adjust any electrical or mechanical functions of this appliance, as this may cause danger and void the warranty.
19. **DO NOT** force discharge, recharge, disassemble, heat above 60°C (140°F), or incinerate. Doing so may result in injury due

- to venting, leakage, or explosion resulting in chemical burns.
20. The misting feature is suitable for indoor and outdoor use. This product is **NOT** a humidifier.
21. Never attempt to mist substances other than filtered or clean tap water. **DO NOT** use warm or hot water. Only use cold or room temperature water.
22. **DO NOT** handle live electrical products while in range of the misting stream.
23. Keep non-waterproof electronic equipment and appliances out of the misting stream.
24. To avoid accidental damage or injury **DO NOT** touch the metal misting plate while the unit is on.
25. **DO NOT** attempt to operate the misting feature with an empty water tank. The metal misting plate may reach high temperatures if operated without water.
26. **WARNING: CHOKING HAZARD.** Always keep nozzles and any other small parts out of the reach of children.
27. **DO NOT** use any scented products (fragrances, oils, etc.) in the water tank or on any part of the fan.

 **WARNING:** Not suitable for use with mains-powered variable speed controls.

### LITHIUM BATTERY SAFETY WARNINGS

LITHIUM BATTERIES STORE A LARGE AMOUNT OF ENERGY AND WILL VENT FIRE OR EXPLODE IF MISTREATED.

1. **DO NOT** DO ANY OF THE FOLLOWING TO THE BATTERY PACK:
  - a. Open
  - b. Drop
  - c. Short-circuit
  - d. Puncture
  - e. Incinerate
  - f. Expose to temperatures below 0°C and above 60°C
2. Keep battery pack dry.
3. Charge battery pack only according to its charger's instructions.
4. Inspect battery pack before every use: do not use or charge if damaged.

### BATTERY REMOVAL AND DISPOSAL

This product contains an integral lithium battery (not replaceable).

**DO NOT** incinerate or compost the product with its integral battery. In some areas, it is illegal to place spent lithium batteries in the rubbish or in a municipal solid waste stream. Return product with spent battery to an authorised recycling center or to retailer for recycling. Contact your local recycling center for information on where to drop off the spent product.

### POWER SUPPLY SAFETY

1. Read and follow all instructions that are on the product or provided with the product.
2. **DO NOT** use an extension cord.
3. **DO NOT** use within 3 metres of pool or other bodies of water and do not use in a bathroom.
4. **WARNING:** Risk of Electric Shock. When used outdoors, install only to a covered Class A RCD protected receptacle that is weatherproof with the power unit connected to the receptacle.

## READ AND SAVE THESE INSTRUCTIONS

## Shark FA050UK Series Product Information

According to:

Commission Regulation (EU) 206/2012 implementing Directive 2009/125/EC of the European Parliament and of the Council with regard to eco-design requirements for air conditioners and comfort fans.



NOTE	DESCRIPTION	SYMBOL	VALUE	UNIT
	Maximum Fan Flow Rate	F	12.97	m <sup>3</sup> /min
	Fan Power Input	P	11.25	W
	Service Value	SV	1.15	(m <sup>3</sup> /min)/W
	Standby Power Consumption	$P_{SB}$	0.3	W
Table	Fan Sound Power Level	$L_{WA}$	62	dB(A)
Floor	Fan Sound Power Level	$L_{WA}$	N/A	dB(A)
	Maximum Air Velocity	c	4.66	m/s
	Measurement standard for service value	IEC 60879		

Table	Fan Sound Power Level (Misting)	$L_{WA}$	65	dB(A)
Floor	Fan Sound Power Level (Misting)	$L_{WA}$	N/A	dB(A)

## CAR CHARGER - SOLD SEPARATELY

### INSTRUCTIONS FOR USE:

1. Firmly insert the car charger plug into a 12-volt outlet in your vehicle.
2. Insert the charger connector into the charging port on the back of the fan head.

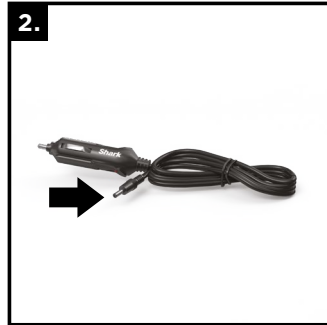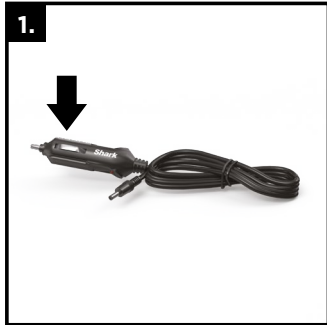

### ⚠ IMPORTANT SAFETY INSTRUCTIONS READ ALL INSTRUCTIONS BEFORE USE

1. **SAVE THESE INSTRUCTIONS.** This manual contains important safety and operating instructions for battery charger model **FAX5XCARUKEU** from Ningbo Junlai Electrical Appliance Co., Ltd.
2. Before using this battery charger, read all instructions and cautionary markings on the battery charger, battery, and product using battery.
3. **CAUTION:** To reduce risk of injury, charge only the provided rechargeable battery. Other types of batteries may burst, causing injury to persons and damage.
4. **DO NOT** expose charger to rain, moisture, or snow.
5. Use of an attachment not recommended or sold by the battery charger manufacturer may result in a risk of fire, electric shock, or injury to persons.
6. To reduce damage to car charger and cord, do not attempt to remove the charger from the outlet by pulling the cord. Pull the entire car charger connection from the outlet.
7. To reduce risk of electric shock, unplug charger before attempting any maintenance or cleaning. Turning off controls will not reduce this risk.
8. **DO NOT** operate the car charger if any components are damaged.
9. To clean the charger, first unplug it, then gently wipe it with a damp cloth. Allow the charger to air-dry completely before using it.
10. The charger uses a replaceable 5-amp fuse. To remove the fuse, unscrew the chrome knob at the tip of the charging plug. Use only 5-amp fuses for replacement.

**READ AND SAVE THESE INSTRUCTIONS**

## WHAT'S INCLUDED

### Includes:

- Fan
- Charger



**Charger**  
(Reference image only)

**Fan**  
(Already assembled)

## FEATURES

### CORDLESS

This is a 2-in-1 fan that can be used with or without the cord.

### OUTDOORS

This fan can be enjoyed indoors or outdoors.  
**DO NOT CHARGE OR USE IN THE RAIN.**

### VERTICAL TILT

Direct the airflow by manually adjusting the vertical tilt up to 45 degrees.


### MISTING

Integrated misting suitable for both indoor and outdoor usage.

## HOW TO USE YOUR FAN

### Fan Speed

 






Press  on the fan head to cycle between fan settings:

Fan speeds 1-5 | NaturalBreeze modes  
LED lights will indicate selected fan setting.


### Power




Press  on the fan head to turn the fan on.  
The battery LED will indicate how much power your fan has. See below for details.

-  70%-100%: green light
-  30%-69%: amber light
-  6%-29%: red light steady
-  5% and below: red light blinking

### Misting Modes

 

 Press  on the fan head to cycle between mist settings: consistent | interval | OFF  
LED lights will indicate selected mist setting.

**Tip:** Try adjusting the fan speed while misting to customise your cooling experience.

### Approximate Fan ONLY Runtime

**MAXIMUM CORDLESS RUNTIME:** 12 hours on fan speed 1.  
**AVERAGE CORDLESS RUNTIME :** 3.5 hours on fan speed 3.  
**MAXIMUM CORDLESS PERFORMANCE:** 1 hour on fan speed 5.  
**PLUGGED IN:** Indefinite runtime; fan will charge while operating.

### Mist Runtime

**MAXIMUM MISTING RUNTIME:** Up to 60 minutes of Interval misting per tank at any fan speed.  
**MAXIMUM MISTING PERFORMANCE:** Up to 30 minutes of Consistent misting per tank at any fan speed.  
**Note:** The mister will automatically turn off after 1 hour in Consistent mode or 2 hours in Interval mode. This prevents dry running and system damage. See Owner's Guide for more information.

### Charge Time

**FROM 0% TO FULLY CHARGED BATTERY:** Approximately 3 hours

## HOW TO DRY YOUR FAN

- First, empty all the water out of the tank: Hold the fan over a drain, open the water tank cap, then turn the fan upside down and allow all water to drain out.
- Place the fan upright on a level, stable surface. Open the misting cap on the front grille of the fan, then turn on the misting function for 5 seconds to clear any remaining water from the system.
- Place the fan in a well-ventilated space and allow it to air-dry completely.  
**NOTE:** Leave the water tank cap open for 24 hours before closing and storing the unit.



Fan head tilted UP


Fan head tilted DOWN

## VERTICAL TILT



## HOW TO CHARGE YOUR FAN

To charge the fan, insert the charger into the charging port on the back of the fan head. **DO NOT CHARGE OR USE IN THE RAIN.**

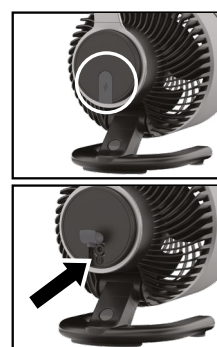

Before every use, fully flush the system for at least one minute and rinse out the tank, to prevent stagnant water being misted.

## BATTERY LIFE

Settings	Runtime
Fan Speed 1	12 hours
Fan Speed 1 + Mist	3.5 hours
Fan Speed 2	7 hours
Fan Speed 2 + Mist	3 hours
Fan Speed 3	3.5 hours
Fan Speed 3 + Mist	2 hours
Fan Speed 4	2 hours
Fan Speed 4 + Mist	1.5 hours


Settings	Runtime
Fan Speed 5	1 hour
Fan Speed 5 + Mist	1 hour
Strong Breeze	2 hours
Strong Breeze + Mist	1.5 hours
Gentle Breeze	7 hours
Gentle Breeze + Mist	3 hours

## SWAPPABLE BASE

The base is removable, so you can swap in different bases or add accessories that suit your needs.



1. To remove the base, gently press the release button and pull the base downward off the fan head post.

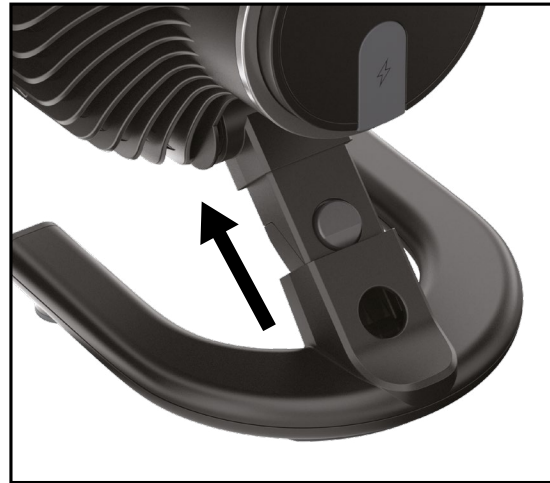

2. To reinstall the base, slide it onto the fan head post, over the button, until it clicks into place.

STORAGE


STORAGE TYPE	INSTRUCTIONS
Short-term storage (less than 24 hours)	Carefully place the fan in the desired storage location. Ensure it is out of reach of children and pets. Bring the fan indoors if inclement weather is predicted.
Long-term storage (more than 24 hours)	Carefully place the fan in the desired storage location. Store the fan indoors when not in use for long periods. Always make sure to keep the fan out of reach of children and pets.

SETTINGS

- Before first cordless use, make sure to fully charge the fan.
- For information on how to activate or deactivate **LOCK MODE** for fan maintenance or travel, please see the Maintenance section.

POWER ON/OFF

 
To turn the fan on or off, press the **POWER** button on the fan head.









5-SPEED MODELS

ON	<div>DISPLAY</div> <div></div> <div>LED animations will play once (LEDs will turn on from left to right, then turn off from right to left)</div>
OFF	<div>DISPLAY</div> <div></div> <div>LED animation will play once (LEDs will turn off from right to left)</div>
 
## FAN SPEEDS

 Changing the **FAN SPEED** will increase or decrease the airflow of the fan. There are 5 fan speed settings. To change the speed, press the  fan speed on the fan head to cycle through the different speeds.




SPEED	DISPLAY (5-SPEED MODELS)	BEST FOR
1		Quiet operation
2		Moderate cooling
3		Balance of noise level and fan power
4		Air circulation
5		High-power cooling




## NATURALBREEZE MODES

  

Turn on either of the NaturalBreeze modes to simulate natural wind conditions.

To activate **STRONG** NaturalBreeze, press the fan speed  icon until the corresponding LEDs are displayed on the unit (see table below for LED patterns).

To transition from **STRONG** NaturalBreeze to **GENTLE** NaturalBreeze press the fan speed  icon on the fan head again.

To deactivate NaturalBreeze, press the fan speed  icon on the on the fan head until you reach your desired fan speed setting.



DISPLAY	SETTING	BEST FOR
	STRONG NaturalBreeze	Simulating strong wind conditions
	GENTLE NaturalBreeze	Simulating gentle wind conditions


NATURALBREEZE WIND PATTERNS	
STRONG NaturalBreeze Mode	GENTLE NaturalBreeze Mode
<ul style="list-style-type: none"> <li>• 6 seconds in Speed 3</li> <li>• 5 seconds in Speed 4</li> <li>• 4 seconds in Speed 5</li> <li>• 5 seconds in Speed 4</li> <li>• The sequence will repeat</li> </ul>	<ul style="list-style-type: none"> <li>• 6 seconds in Speed 1</li> <li>• 5 seconds in Speed 2</li> <li>• 4 seconds in Speed 3</li> <li>• 5 seconds in Speed 2</li> <li>• The sequence will repeat</li> </ul>

## MISTING


The misting feature is suitable for both indoor and outdoor use.

Choose between 2 misting settings to best suit your needs. To change the misting settings, press the Misting ☂ icon on the fan head to cycle through the settings.


To turn off misting, press the Misting icon ☂ on the fan head until no LEDs are illuminated.

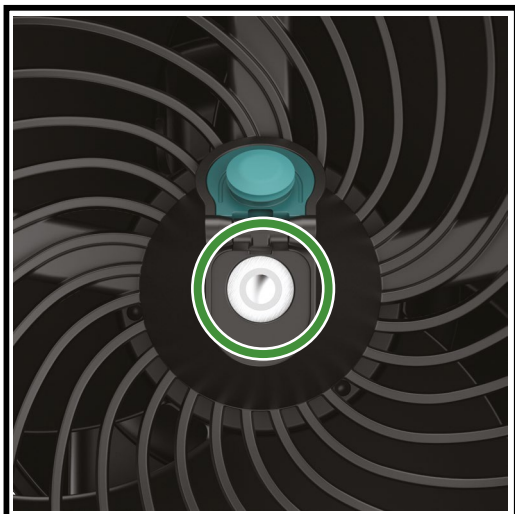

To enable misting, **OPEN** the misting cap in the centre of the fan grill.

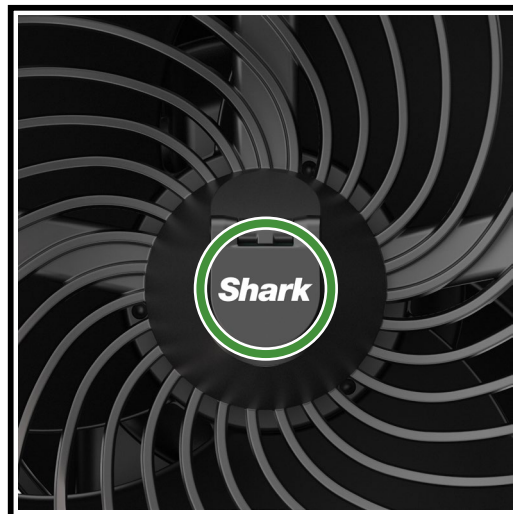

 When done misting, **CLOSE** the cap to prevent dripping.





DISPLAY	SETTING	BEST FOR
	Consistent	Maximum cooling power
	Interval	Longest misting duration

**Note:** Misting will automatically shutoff after 1 hour in **Consistent** and 2 hours in **Interval** mode to prevent dry running and damaging the system.

If you refill the water tank during use, the timer may turn off misting. To reactivate mist, press the Misting ☂ icon on top of the fan head. Repeat as needed. **DO NOT** attempt to mist with an empty water tank.

## TROUBLESHOOTING AND FREQUENTLY ASKED QUESTIONS

  GENERAL USE	Why are the UI buttons on the fan head not working?	<p>Make sure the fan has battery power by pressing the Power button. If the Battery LED indicator blinks red, then the fan needs to be charged. When the fan is charging, the battery LED will blink green. See the Battery Life and How To Use Your Fan sections for more detailed information on runtimes and battery indicators.</p> <p>If all the LEDs are flashing, the fan may be in Lock mode, which deactivates the fan to allow you to safely maintain or travel with it.</p> <p>To turn off Lock mode, press and hold the Power  icon on the fan for 8 seconds. When Lock mode is successfully deactivated, the LEDs will display the Power On pattern. See the Maintenance section for more information.</p>
	Why are the misting and battery lights flashing when I try to activate the misting feature?	If the battery level is low, the misting feature cannot be activated. Charge the fan battery to use misting.
	Why did misting shutoff?	<p>Misting will automatically shutoff after 1 hour in Consistent and 2 hours in Interval mode to prevent dry running and damaging the system.</p> <p>If you refill the water tank during use, misting may last longer than automatic shutoff timers. To reactivate mist, press the Misting  on the top of the fan head. Repeat as needed. <b>DO NOT</b> attempt to mist with an empty water tank.</p>
	Can I leave the fan outdoors?	This fan is rain-resistant and will not be damaged by light rain. However, it is not suitable to withstand heavy rain or water submersion. <b>Do not charge or use your fan in the rain.</b>
	The second LED indicator and the Battery LED (in amber) are flashing. What is wrong?	This error state indicates an issue with the voltage of the charger. Please be sure to only use the provided Shark® charging cable and power supply intended for this product.
MAINTENANCE	Why do I have to activate Lock mode before maintenance?	<p>The fan must be in Lock mode when any maintenance is performed. Lock mode prevents the fan from accidentally powering on.</p> <p>It is also recommended to activate Lock mode when traveling with the fan. See the Maintenance section for more information.</p>
	How often should I clean the fan?	We recommend using a damp cloth to wipe down the external surfaces of the fan every 6 months or as needed.
	How often should I clean the misting system?	<p>Clean the misting system every week or as needed. Using harder water will require more frequent cleaning. See Maintenance section for more information on cleaning the misting system.</p>
	Why isn't my fan misting effectively?	<p>Ensure the misting cap located in the centre of the fan grill is fully open. See the Misting section for more information. The misting system may clog if not maintained properly. See the Maintenance section for details on cleaning instructions.</p>

## CLEAN SOAK

It is recommended to perform a clean soak every week or as needed. Ensure you empty and dry the water tank completely after every use.

To perform a clean soak:

1. Activate **LOCK MODE** by holding down the power button for 8 seconds until the lights flash. This will temporarily disable all fan functions to prevent the fan from accidentally turning on during maintenance.
2. Fill the water tank with 150ml of undiluted distilled white vinegar (5% acetic acid by volume) and let sit for 5-7 minutes. **DO NOT** let the vinegar sit for more than 15 minutes.
3. Carefully dump the vinegar out of the tank.
4. Refill the tank with clean tap or filtered water.
5. Ensure the water tank and misting cap are fully sealed, then shake the unit for 10 seconds.
6. Carefully dump the water out of the tank.
7. Repeat steps 4, 5 and 6 once more to thoroughly rinse the water tank.
8. Deactivate **LOCK MODE** by holding down the power button for 8 seconds until the lights show the startup pattern.


Please allow the water tank to dry completely before using the unit again.

## LOCK MODE

- **LOCK MODE** temporarily blocks all fan functions for 24 hours to prevent the fan from accidentally powering on during fan head maintenance or travel.

**1.**


**Hold for 8 seconds**

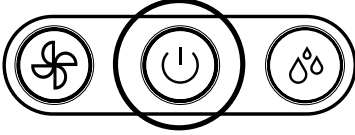

Lights will blink when Lock mode has been activated

1. Activate Lock mode before traveling and performing maintenance to prevent the fan from accidentally powering on during transport. To activate, hold down the **POWER** icon on the fan head for 8 seconds until the LEDs begin to flash.


**2.**



2. Lock Mode will automatically deactivate after 24 hours.

**3.**

**Hold for 8 seconds**

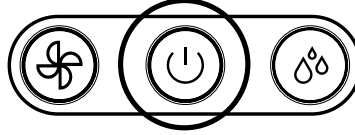

Lights will show the Power On pattern when Lock mode has been deactivated

3. If you wish to deactivate Lock mode before 24 hours, hold down the **POWER** icon on the fan head for 8 seconds until the LEDs show the Power On pattern.

## MANUFACTURER'S GUARANTEE

When a consumer buys a product in the United Kingdom, they get the benefit of legal rights relating to the quality of the product (your "legal rights"). You can enforce your legal rights against your retailer, including Shark if you bought your Shark appliance from [sharkclean.co.uk](http://sharkclean.co.uk). However, at Shark we are so confident about the quality of our products that we give the owner an additional, free parts and labour manufacturer's guarantee of up to 2 years.

A household appliance like a Shark Fan appliance constitutes a sizeable investment. Your new machine needs to work properly for as long as possible. The guarantee it comes with is an important consideration - and reflects how much confidence the manufacturer has in its product and manufacturing quality. The manufacturer's guarantee does not affect your legal rights.

### How long are new Shark machines guaranteed for?

Our manufacturer's guarantee lasts for one year from the date of purchase as standard, or for two years if you register your purchase with us within 28 days. There is information on how to register below.

### How do I register my Shark guarantee?

If you have purchased your Shark Fan appliance directly from [sharkclean.co.uk](http://sharkclean.co.uk) your guarantee is registered automatically. If you bought it from anywhere else, you can register your guarantee online within 28 days of purchase.

- To register online, please visit [sharkclean.co.uk/register-guarantee](http://sharkclean.co.uk/register-guarantee) or scan the QR code in your instruction manual.
- Keep a note of the date you purchased the machine.

### IMPORTANT:

- **Keep your receipt** if you bought your Shark Fan appliance from anywhere except [sharkclean.co.uk](http://sharkclean.co.uk). You will need it to claim under your guarantee.
- The free Shark guarantee only applies in the UK.

What are the benefits of registering my free Shark guarantee?

When you register your guarantee, you will get an extra year of cover. We'll also have your details to hand if we ever need to get in touch. If you further agree to receive communications from us, you can also receive tips and advice on how to get the best out of your Shark Fan appliance and hear the latest news about new Shark technology and launches.

### What is covered by the free Shark guarantee?

Repair or replacement (at Shark's option) of your Shark machine, including all parts and labour.

### What is not covered by the free Shark guarantee?

- Normal wear and tear.
- Accidental damage or faults caused by negligent use or care, misuse, neglect, careless operation or handling of the Shark appliance which is not in accordance with the Shark Operating Manual supplied with your machine.
- Damage caused by use of the Shark appliance for anything other than normal domestic household purposes.
- Damage caused by use of parts not assembled or installed in accordance with the operating instructions.
- Damage caused by use of parts and accessories which are not Shark Genuine Components
- Faulty installation (except where installed by Shark).
- Repairs or alterations carried out by parties other than Shark or its agents.

### How can I claim under the free Shark guarantee?

Contact our customer service helpline on 0800 862 0453. For service hours please visit our website. It's free to call, and you'll be put through to a Shark representative. You'll also find online support at [support.sharkclean.co.uk/](http://support.sharkclean.co.uk/).

The Shark representative will go through some troubleshooting with you, and if we conclude that the item has failed, we will send you a replacement part or a returns label to send the defective item back to us free of charge. When you have delivered the defective product to us, we will send you a replacement.

Please remember that the item will need to be boxed when you return it to us, which can be any suitable box; it does not have to be the original packaging.

### Where can I buy genuine Shark spares and accessories?

Shark spares and accessories are developed by the same engineers who developed your Shark Fan appliance.

You'll find a full range of Shark spares, replacement parts and accessories for all Shark machines at [sharkclean.co.uk](http://sharkclean.co.uk). Please remember that damage caused by the use of non-Shark spares may not be covered under your guarantee.

## REGISTER YOUR PURCHASE

sharkclean.uk/register-guarantee  
Scan QR code using mobile device.



Benefits of registering your product and creating an account:

- Get easier, faster product support and access to warranty information
- Access troubleshooting and product care instructions
- Be among the first to know about exclusive product promotions

**TIP:** You can find the model and serial numbers on the QR code label on the underside of the fan head.

## RECORD THIS INFORMATION

Model Number: \_\_\_\_\_  
Serial Number: \_\_\_\_\_  
Date of Purchase: \_\_\_\_\_  
(Keep receipt)  
Store of Purchase: \_\_\_\_\_

## BATTERY REMOVAL AND DISPOSAL

This product contains an integral lithium battery (not replaceable).

**DO NOT** incinerate or compost the product with its integral battery.

In some areas, it is illegal to place spent lithium batteries in the rubbish or in a municipal solid waste stream. Return product with spent battery to an authorised recycling center or to retailer for recycling. Contact your local recycling center for information on where to drop off the spent product.

## TECHNICAL SPECIFICATIONS

Voltage: 220-240V- 50-60Hz / 3A  
Watts: 36W

## PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

This Owner's Guide is designed to help you get a complete understanding of your new Shark® fan.

SharkNinja Europe Ltd,  
1st/2nd Floor Building 3150,  
Thorpe Park, Century Way,  
Leeds, England, LS15 8ZB  
sharkclean.co.uk

SharkNinja Germany GmbH,  
Rotfeder-Ring 9,  
60327 Frankfurt am Main,  
Germany  
sharkclean.eu

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material sources. To return your used device, please use the return and collection systems or contact the retailer where this product was purchased. They can take this product for environmentally safe recycling.