

Shark

FlexBreeze ProMist Fan

FA300UK Series

QUICK START GUIDE



FOR MORE INFORMATION

visit qr.sharkclean.com/FA300UK or

SCAN HERE

USING YOUR SMARTPHONE CAMERA



©2024 SharkNinja Operating LLC. SHARK is a registered trademark
in the United Kingdom of SharkNinja Operating LLC

FA300UK_Series_QSG_AAA_X7_Mv1_241219

IMPORTANT SAFETY INSTRUCTIONS

SUITABLE FOR OUTDOOR USE. HOUSEHOLD USE ONLY.

 IPX5 RAIN RESISTANT (EXCLUDING REMOTE)

NOTE: Before every use, empty and rinse the hose and water tank to prevent stagnant water from being misted.

 **WARNING:** TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY: READ ALL THESE INSTRUCTIONS BEFORE USE. MISTING FUNCTION IS FOR OUTDOOR USE ONLY.

 **WARNING: SLIPPERY SURFACE. IMPROPER USE AND/OR LEAKS CAN RESULT IN A SLIPPERY SURFACE AND A FALL HAZARD.**

- This appliance is operated by a rechargeable battery. ONLY recharge the battery with the charger supplied with the unit, battery charger for use only with model GQ36-120300-ABO power supply from Dongguan Gangqi Electronics Co., Ltd. or with model AJJ3-1 from Anlian. A charger that may be suitable for one type of battery may create a risk of fire when used with another battery.
- Do not** attempt to destroy, remove, or disassemble the battery pack from the machine. **Do not** incinerate battery cells. Consult your local waste authority for information regarding available recycling and/or disposal options.
- This appliance comes with a remote control which is suitable for 2x AAA batteries. Dispose of batteries properly. Always keep batteries away from children (choke hazard). Even use batteries can cause injury.
- To reduce the risk of an electric shock, connect only to an outlet provided with a Residual Current Device (RCD).
- The fan should be used on a stable and level surface.
- Never use this fan near pools, bathtubs, showers, basins, or other vessels containing water.
- Do not** operate any unit with a damaged power supply wire or battery charger. Discard the unit or return to an authorized service facility for examination and/or repair.
- Do not** run cord under carpeting. **Do not** cover charge cord with throw rugs, runners, or similar coverings. **Do not** route charger cord under furniture or appliances. Keep charger cord away from high-traffic areas. Place charger in an area where the cord will not be tripped over.
- If the charger cord is damaged, it should be replaced.
- This appliance is not intended for use by anyone (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they **do not** play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Prior to cleaning or other maintenance, the appliance must be unplugged from the electrical outlet.
- Only use Shark branded accessories.
- Do not** use if appliance is not working as it should, or has been dropped, damaged, left outdoors for extended periods of time in poor weather without the protective cover applied or dropped into water.
- Turn off all controls before plugging in or unplugging the appliance.
- Unplug from electrical outlet when not in use and before any maintenance or cleaning.
- Hand wash exterior/hard plastic/non-electronic parts with water only. **Do not** immerse. Cleaning with chemicals could damage the unit.
- Do not** attempt to repair or adjust any electrical or mechanical functions of this appliance, as this may cause danger and void the warranty.
- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. **Do not** dispose of batteries in household waste or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Compatible battery type is AAA.
- The nominal battery voltage is 1.5V.
- Non-rechargeable batteries are not to be recharged.
- Do not** force discharge, recharge, disassemble, heat above 60°C (140°F), or incinerate. Doing so may result in injury due to venting, leakage, or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not** mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used on an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.
- The misting accessory is suitable for **OUTDOOR USE ONLY**.
- Do not** use warm or hot water. Only use cold or room temperature water.
- Do not** handle live electrical products while in range of the misting stream.
- Keep non-waterproof electronic equipment and appliances out of the misting stream.
- WARNING: CHOKING HAZARD.** Always keep nozzles and any other small parts out of the reach of children.
- Do not apply any fragrance or scented products onto any part of the fan during use or maintenance.
- Always follow the warning information on the batteries and in the manuals of devices.
- Only use the recommended battery types.
- Keep batteries away from children.
- Unpacked batteries shall not lie about in bulk.
- In case of battery change always replace all batteries with new ones of identical type and brand.
- Do not swallow batteries.
- Do not throw batteries into water.
- Do not throw batteries into fire.
- Avoid deep discharge.
- Do not short-circuit batteries.
- Use recommended charging time and current.
- Do not open or disassemble batteries.
- Do NOT direct mist toward electrical wiring or devices.

 **WARNING:** Not suitable for use with mains-powered variable speed controls.

LITHIUM BATTERY SAFETY WARNINGS

LITHIUM BATTERIES STORE A LARGE AMOUNT OF ENERGY AND WILL VENT FIRE OR EXPLODE IF MISTREATED.

- DO NOT** DO ANY OF THE FOLLOWING TO THE BATTERY PACK:
 - Open
 - Drop
 - Short-circuit
 - Puncture
 - Incinerate
 - Expose to temperatures below 0°C and above 60°C
- Keep battery pack dry.
- Charge battery pack only according to its charger's instructions.
- Inspect battery pack before every use: **Do not** use or charge if damaged.

BATTERY REMOVAL AND DISPOSAL

This product contains an integral lithium battery (not replaceable), and the remote control uses 2x AAA battery. When the remote battery no longer has a charge, it should be removed from the remote and recycled. **DO NOT** incinerate or compost the product with its integral battery or the remote battery. When your remote battery needs to be replaced, dispose of it or recycle it in accordance with local ordinances or regulations. In some areas, it is illegal to place spent lithium batteries in the trash or in a municipal solid waste stream. Return spent battery to an authorized recycling center or to retailer for recycling. Contact your local recycling center for information on where to drop off the spent battery.

POWER SUPPLY SAFETY

- Read and follow all instructions that are on the product or provided with the product.
- Do not** use an extension cord.
- Do not** use within 10 feet (3 metres) of pool or other bodies of water and **do not** use in a bathroom.
- WARNING:** Risk of Electric Shock. When used outdoors, install only to a covered Class A RCD protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord **do not** interfere with closing the receptacle cover.

 
READ AND SAVE THESE INSTRUCTIONS

SETTING UP YOUR REMOTE

1. Slide the battery cover off the rear side of the remote.
2. Place the 2x AAA batteries in the remote - ensure that the batteries are placed in the remote with the correct polarity (+ and -).
3. Replace the battery cover by sliding it into the remote.



BATTERY SAFETY

- Place battery into remote in the correct polarity (+ and -)
- Remove batteries during long periods of non-use. Otherwise, this may lead to the batteries inside leaking over time.
- Properly dispose of used batteries. **DO NOT** dispose of the batteries in fire.
- **DO NOT** expose the remote to long periods of rain or moisture.

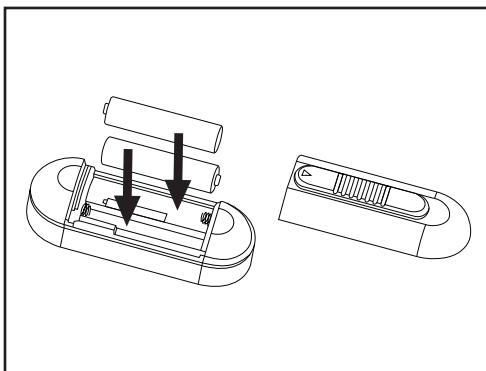

ASSEMBLING YOUR FAN

  
INCLUDES: • Hex Key Multi-Tool • Bolt • Base • Fan Head • Water Tank • Remote • Charging Cable • Fan Cover • 2-Piece Pole • Hose

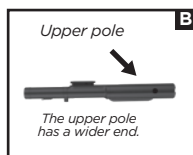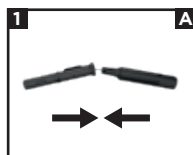

1. Align and insert the **Upper Pole** into the **Lower Pole** until it clicks into place.



 2. Align the yellow dot on the assembled pole with the yellow arrow on the **Base**, then slide the pole down onto the base. Ensure that the pole is fully against the base before proceeding.

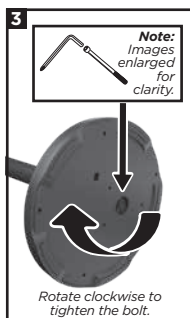

3. Turn the **Base** on its side, then insert the Bolt in the bottom of the **Base**. Use the **Hex Key** to turn the bolt clockwise to fasten it to the assembled pole.



4. **CAUTION:** finger pinch risk. Holding the **fan head** by the handle, insert the legs into the top of the assembled pole until they click into place.



5. Holding the **Water Tank** by the handle, align the rear of the tank against the pole and slide down to latch into place.



 
6. Charge fan to 100% battery power before use without the cord. **First use:** before using remote control, press **Power Button** on fan. Fan is operable while charging.



7. Align the **Misting Hose** into the back of the **Water Tank** and rotate clockwise to lock in place.



8. Align the **Misting Hose** into the rear of the **Fan Head** and rotate counterclockwise to lock in place.

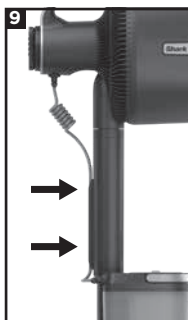

9. Tuck the rest of the hose into the channel and clamp on the back of the pole.

FEATURES

CORDLESS

This is a 2-in-1 fan that can be used with or without the cord.

OUTDOOR

This fan can be enjoyed indoors or outdoors.

DO NOT CHARGE OR USE IN THE RAIN

REMOTE STORAGE

Store the remote on the back of the fan head when it's not in use.

NATURALBREEZE

Activate gentle/strong NaturalBreeze modes to simulate natural wind conditions.

OUTDOOR MISTING

Integrated misting enabled through a portable water tank and 2 misting nozzles and 3 misting modes.

TIMER

Set the timer to turn off the fan automatically.

OSCILLATION & TILT

Enable up to 180 degrees of horizontal oscillation and up to 55 degrees of vertical tilt.

TABLETOP MODE

To convert the fan to portable, tabletop mode:



To detach the fan from the pole, press the Lift-Away button, then slide the fan head off the pole.



Spread out the four support legs until they are fully extended. Place the fan on a flat, level surface and begin use.



Connect the hose to the tank and fan head while in tabletop mode for misting on-the-go.

Note: To avoid accidental damage to your fan, ensure the hose is disconnected from the back of the fan head before converting to tabletop mode.

CHARGING YOUR FAN

 


PEDESTAL MODE: To charge the fan in pedestal mode, insert the **CHARGE PLUG** into the charging port near the bottom of the **POLE**.



TABLETOP MODE: To charge the fan in tabletop mode, insert the **CHARGER PLUG** into the charging port under the center shaft of the fan, between the 4 support legs. **DO NOT CHARGE OR USE IN THE RAIN.**

REMOTE STORAGE

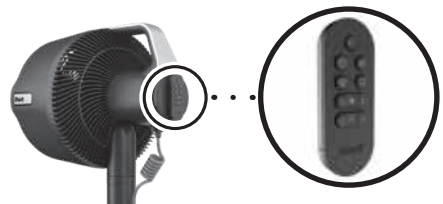

If the fan is unplugged and not used for 24 hours the remote will enter **IDLE** mode to preserve battery. To turn off **IDLE** Mode, use the buttons on the fan head.

HOW TO USE YOUR FAN


Fan Speeds	Press  on the fan head or <  > arrows on the remote to switch between fan speeds. LED lights will indicate selected fan speed.	
	NaturalBreeze Modes	To activate STRONG breeze mode, press  once on the REMOTE, or press  on the fan head an additional time.
		To activate GENTLE breeze mode, press  a 2nd time on the REMOTE, or press  on the fan an additional time.
Oscillation Settings	Press  on the fan head or  on the remote to toggle between oscillation settings. LED lights will indicate which setting is selected.	
Timer	 Setting 1 : 1 Hour  Setting 2 : 2 Hours  Setting 3 : 3 Hours  Setting 4 : 4 Hours  Setting 5 : 5 Hours	(REMOTE ONLY) Press  to switch between timer settings 1-5 hours. LED lights will appear to indicate how many hours the timer is set for. LEDs will switch off after 20 seconds. To check how long is left on your timer, press  and the LED lights will appear.
Horizontal Angle Adjust	Press the <  > arrows on the remote to change the horizontal angle of the fan in 18° increments.	
Outdoor Misting Settings	1-3	Press  once to turn on high-pressure consistent mist. Press  a 2nd time to switch to the low-pressure consistent mist mode. Press  a 3rd time to switch to the interval mist mode.
Runtime	Fan ONLY No Oscillation	MAXIMUM CORDLESS RUNTIME: 24 hours (approximate) on fan speed 1. MAXIMUM CORDLESS RUNTIME: 6 hours (approximate) on fan speed 3. MAXIMUM CORDLESS PERFORMANCE: 2 hours (approximate) on fan speed 5. PLUGGED IN: Indefinite runtime; fan will charge while operating.
	Fan + Outdoor Misting	MAXIMUM MISTING PERFORMANCE: 1 hour (approximate) per tank with constant misting on fan speed 5.
Charge Time	FROM 0% TO FULLY CHARGED BATTERY: 5-6 hours	
Battery Indicator	 70%-100%: green light  6%-29%: red light steady  30%-69%: amber light  5% and below: red light blinking	

Before every use, fully flush the hose out for at least one minute before connecting and rinse out the tank, to prevent stagnant water being misted.

AVAILABLE ACCESSORIES



 Car Charger

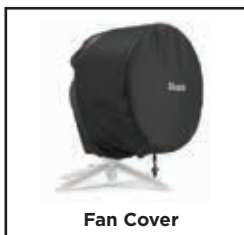

Fan Cover



Travel Bag



Base Cover



Garden Hose Adapter



Travel Tank



Filter Attachment

VERTICAL TILT

To adjust the vertical height of the fan head, use the handle to manually tilt the head up or down. The fan has a vertical range of 55° degrees.



Fan head tilted UP

 
 


Fan head tilted DOWN

REMOTE PAIRING INSTRUCTIONS

Turn the unit on by pressing the power button on top of the fan head and check if the remote functions properly. If the remote is not functioning, try the following:

1. Check to ensure the 2x AAA batteries are placed in the remote in the correct orientation.
2. Try connecting the remote to the fan by pressing and holding the power button on the fan head for 5 seconds. While the LEDs are flashing, press the fan speed up button on the remote.



3. If the remote still doesn't work, then try replacing the batteries in the remote and repeat the connection process above.

MANUFACTURER'S GUARANTEE

When a consumer buys a product in the United Kingdom, they get the benefit of legal rights relating to the quality of the product (your "legal rights"). You can enforce your legal rights against your retailer, including Shark if you bought your Shark appliance from sharkclean.co.uk. However, at Shark we are so confident about the quality of our products that we give the owner an additional, free parts and labour manufacturer's guarantee of up to 2 years.

A household appliance like a Shark Fan appliance constitutes a sizeable investment. Your new machine needs to work properly for as long as possible. The guarantee it comes with is an important consideration - and reflects how much confidence the manufacturer has in its product and manufacturing quality.

The manufacturer's guarantee does not affect your legal rights.

How long are new Shark machines guaranteed for?

Our manufacturer's guarantee lasts for one year from the date of purchase as standard, or for two years if you register your purchase with us within 28 days. There is information on how to register below.

How do I register my Shark guarantee?

If you have purchased your Shark Fan appliance directly from sharkclean.co.uk your guarantee is registered automatically. If you bought it from anywhere else, you can register your guarantee online within 28 days of purchase.

- To register online, please visit sharkclean.co.uk/register-guarantee or scan the QR code in your instruction manual.
- Keep a note of the date you purchased the machine.

IMPORTANT:

- **Keep your receipt** if you bought your Shark Fan appliance from anywhere except sharkclean.co.uk. You will need it to claim under your guarantee.
- The free Shark guarantee only applies in the UK.

What are the benefits of registering my free Shark guarantee?

When you register your guarantee, you will get an extra year of cover. We'll also have your details to hand if we ever need to get in touch. If you further agree to receive communications from us, you can also receive tips and advice on how to get the best out of your Shark Fan appliance and hear the latest news about new Shark technology and launches.

What is covered by the free Shark guarantee?

Repair or replacement (at Shark's option) of your Shark machine, including all parts and labour.

What is not covered by the free Shark guarantee?

- Normal wear and tear.
- Accidental damage or faults caused by negligent use or care, misuse, neglect, careless operation or handling of the Shark appliance which is not in accordance with the Shark Operating Manual supplied with your machine.
- Damage caused by use of the Shark appliance for anything other than normal domestic household purposes.
- Damage caused by use of parts not assembled or installed in accordance with the operating instructions.
- Damage caused by use of parts and accessories which are not Shark Genuine Components
- Faulty installation (except where installed by Shark).
- Repairs or alterations carried out by parties other than Shark or its agents.

How can I claim under the free Shark guarantee?

Contact our customer service helpline on 0800 862 0453. For service hours please visit our website under 'Contact Us'. It's free to call, and you'll be put straight through to a Shark representative. You'll also find online support at support.sharkclean.co.uk/.

MANUFACTURER'S GUARANTEE

The Shark representative will go through some troubleshooting with you, and if we conclude that the item has failed, we will send you a replacement part or a returns label to send the defective item back to us free of charge. When you have delivered the defective product to us, we will send you a replacement.

Please remember that the item will need to be boxed when you return it to us, which can be any suitable box; it does not have to be the original packaging.

Where can I buy genuine Shark spares and accessories?

Shark spares and accessories are developed by the same engineers who developed your Shark Fan appliance. You'll find a full range of Shark spares, replacement parts and accessories for all Shark machines at sharkclean.co.uk. Please remember that damage caused by the use of non-Shark spares may not be covered under your guarantee.

IMPORTANT INFORMATION

REGISTER YOUR PURCHASE

sharkclean.uk/register-guarantee
Scan QR code using mobile device.



TIP:

You can find the model and serial numbers on the QR code located on the back of your unit.

RECORD THIS INFORMATION

Model Number:
Serial Number:
Date of Purchase (Keep receipt):
Store of Purchase:

TECHNICAL SPECIFICATIONS

Voltage: 12V DC / 3A
Watts: 36W

Benefits of registering your product and creating an account:

- Get easier, faster product support and access to warranty information
- Access troubleshooting and product care instructions
- Be among the first to know about exclusive product promotions

BATTERY REMOVAL AND DISPOSAL

This product's remote control uses a lithium button battery. When the battery no longer has a charge, it should be removed from the remote and recycled.

DO NOT incinerate or compost the battery.

When your lithium battery needs to be replaced, dispose of it or recycle it in accordance with local ordinances or regulations. In some areas, it is illegal to place spent lithium batteries in the bin or in a municipal solid waste stream. Return spent battery to an authorised recycling center or to retailer for recycling. Contact your local recycling center for information on where to drop off the spent battery.

PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

This Instruction Guide is designed to help you get a complete understanding of your new Shark® Fan.

SharkNinja Europe Ltd,
1st/2nd Floor Building 3150,
Thorpe Park, Century Way,
Leeds, England, LS15 8ZB
sharkclean.co.uk

SharkNinja Germany GmbH,
Rotfeder-Ring 9,
60327 Frankfurt am Main,
Germany
sharkclean.eu

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

© 2024 SharkNinja Operating LLC. SHARK is a registered trademark in the United Kingdom of SharkNinja Operating LLC.



@sharkhomeUK