

IMPORTANT SAFETY INSTRUCTIONS

SUITABLE FOR HOUSEHOLD USE ONLY.

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY: READ ALL THESE INSTRUCTIONS BEFORE USE.

- DO NOT** incinerate battery cells. Consult your local waste authority for information regarding available recycling and/or disposal options.
- This appliance comes with a remote control which contains a AAA battery. Dispose of batteries properly. Always keep batteries away from children (choke hazard). Even used batteries can cause injury.
- To reduce the risk of an electric shock, connect only to an outlet provided with a Residual Current Device (RCD).
- The fan should be used on a stable and level surface.
- Never use this fan near pools, bathtubs, showers, basins, or other vessels containing water.
- DO NOT** operate any unit with a damaged wire. Discard the unit or return to an authorized service facility for examination and/or repair.
- DO NOT** run cord under carpeting. **DO NOT** cover cord with throw rugs, runners, or similar coverings. **DO NOT** route cord under furniture or appliances. Keep cord away from high-traffic areas.
- If the cord is damaged, it should be replaced.
- This appliance is not intended for use by anyone (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they **DO NOT** play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Prior to cleaning or other maintenance, the appliance must be unplugged from the electrical outlet.
- Only use Shark branded accessories.
- DO NOT** use if appliance is not working as it should, or has been dropped, damaged, left outdoors, or dropped into water.
- Turn off all controls before plugging in or unplugging the appliance.
- Unplug from electrical outlet when not in use and before any maintenance or cleaning.
- Hand wash exterior/hard plastic/non-electronic parts with water only. **DO NOT** immerse. Cleaning with chemicals could damage the unit.
- DO NOT** attempt to repair or adjust any electrical or mechanical functions of this appliance, as this may cause danger and void the warranty.
- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. **DO NOT** dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Compatible battery type is AAA.
- The nominal battery voltage is 3V.
- Non-rechargeable batteries are not to be recharged.
- DO NOT** force discharge, recharge, disassemble, heat above 60°C, or incinerate. Doing so may result in injury due to venting, leakage, or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- DO NOT** mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.

- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.

- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.



WARNING: Not suitable for use with solid-state speed controls.

BATTERY REMOVAL AND DISPOSAL

This remote control uses a AAA battery. When the remote battery no longer has a charge, it should be removed from the remote and recycled. **DO NOT** incinerate or compost the product with its remote battery. When your remote battery needs to be replaced, dispose of it or recycle it in accordance with local ordinances or regulations. In some areas, it is illegal to place spent batteries in the trash or in a municipal solid waste stream. Return spent battery to an authorised recycling center or to a retailer for recycling. Dispose of or recycle the battery in accordance with local ordinances or regulations.

POWER SUPPLY SAFETY

- Read and follow all instructions that are on the product or provided with the product.
- DO NOT** use an extension cord.
- DO NOT** use within 3 metres of pool and **DO NOT** use in a bathroom or other bodies of water.



FOR MORE INFORMATION


VISIT [QR.SHARKCLEAN.COM/TF200SUK](https://qr.sharkclean.com/tf200suk) OR SCAN HERE USING YOUR SMARTPHONE CAMERA

QUICK START GUIDE

Visit qr.sharkclean.com/TF200SUK or Scan here using your smartphone



SETTING UP YOUR FAN

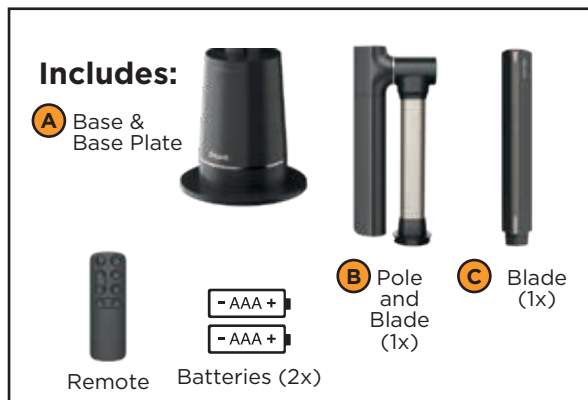

1. Remove Base from packaging, place on an even surface.
2. Use assembly stickers to align the red arrow printed on the **Pole** with the red arrow printed on the **Base**. Twist clockwise to lock **Pole** into **Base**. Remove tape after assembly has been completed.
3. Remove cardboard and tape from **Pole**. Line up the printed red circle on the Blade with the red circle on the inner **Pole**. Firmly press the Blade into the **Pole** until you hear a click. Remove all assembly tape on **Base** and **Pole**.

FEATURES



PIVOT left or right to increase horizontal coverage (manual)



TILT the nozzles to direct airflow (manual)



TELESCOPE the fan to adjust the height (manual)



Magnetically store **REMOTE** on back of the fan.



DUST DEFENCE removable panel collects dust to make cleaning the fan easier.

CUSTOMISABILITY

	POWER ON <i>Press button on base or remote</i>	Press to turn the unit on or off.
	FAN SPEEDS <i>Press and hold button on base or press on remote</i>	Press the fan icon on the remote or hold down the power button on the unit to switch between fan speeds 1-10. LED lights will indicate selected fan speed.
	Speciality Modes <i>Remote only</i>	Setting 1: Sleep Mode. For 8 hours fan will adjust to the best settings for ambient noise, whilst dimming lights and muting chimes. Setting 2: Boost Mode. Fan will create high speed airflow above speed setting 10. Setting 3: Breeze Mode. Fan will create varying airflow patterns to simulate natural wind. Setting 4: Off
	Oscillation <i>Remote only</i>	Setting 1: 45 degrees Setting 2: 90 degrees Setting 3: 180 degrees Press the oscillation icon on the remote to toggle between oscillation angles. LED lights will indicate which angle is selected. ⚠ If you'd like to oscillate the unit when it is horizontal, make sure to place it somewhere it will not hit any walls or objects.
	Timer <i>Remote only</i>	Setting 1: 1 Hour Setting 2: 2 Hours Setting 3: 4 Hours Setting 4: 8 Hours Setting 5: 12 Hours Press the timer icon on the remote to switch between timer settings 1-12 hours. LED lights will appear to indicate how many hours the timer is set for. LEDs will switch off after 20 seconds. To check how long is left on your timer, press the timer icon and LED lights will appear.
	Horizontal Angle Adjust <i>Remote only</i>	Press the angle adjust arrows on the remote to change the horizontal angle of the fan at a distance.

TO DISABLE CHIME: Hold down the timer and oscillation buttons on the remote at the same time for 3 seconds to disable chiming. Repeat to re-enable.

CARRYING UNIT: Recommended carrying position is to use the handle on the base while simultaneously supporting the pole.



When a consumer buys a product in the United Kingdom, they get the benefit of legal rights relating to the quality of the product (your "legal rights"). You can enforce your legal rights against your retailer, including Shark if you bought your Shark appliance from sharkclean.co.uk. However, at Shark we are so confident about the quality of our products that we give the owner an additional, free parts and labour manufacturer's guarantee of up to 2 years.

A household appliance like a Shark Fan appliance constitutes a sizeable investment. Your new machine needs to work properly for as long as possible. The guarantee it comes with is an important consideration - and reflects how much confidence the manufacturer has in its product and manufacturing quality.

The manufacturer's guarantee does not affect your legal rights.

How long are new Shark machines guaranteed for?

Our manufacturer's guarantee lasts for one year from the date of purchase as standard, or for two years if you register your purchase with us within 28 days. There is information on how to register below

How do I register my Shark guarantee?

If you have purchased your Shark Fan appliance directly from sharkclean.co.uk your guarantee is registered automatically. If you bought

it from anywhere else, you can register your guarantee online within 28 days of purchase.

- To register online, please visit sharkclean.co.uk/register-guarantee or scan the QR code in your instruction manual.
- Keep a note of the date you purchased the machine.

IMPORTANT:

- Keep your receipt if you bought your Shark Fan appliance from anywhere except sharkclean.co.uk. You will need it to claim under your guarantee.
- The free Shark guarantee only applies in the UK.

What are the benefits of registering my free Shark guarantee?

When you register your guarantee, you will get an extra year of cover. We'll also have your details to hand if we ever need to get in touch. If you further agree to receive communications from us, you can also receive tips and advice on how to get the best out of your Shark Fan appliance and hear the latest news about new Shark technology and launches.

What is covered by the free Shark guarantee?

Repair or replacement (at Shark's option) of your Shark machine, including all parts and labour.

What is not covered by the free Shark guarantee?

- Normal wear and tear.
- Accidental damage or faults caused by negligent use or care, misuse, neglect, careless operation or handling of the Shark appliance which is not in accordance with the Shark Operating Manual supplied with your machine.
- Damage caused by use of the Shark appliance for anything other than normal domestic household purposes.
- Damage caused by use of parts not assembled or installed in accordance with the operating instructions.
- Damage caused by use of parts and accessories which are not Shark Genuine Components
- Faulty installation (except where installed by Shark).
- Repairs or alterations carried out by parties other than Shark or its agents.

How can I claim under the free Shark guarantee?

Contact our customer service helpline on 0800 862 0453. For service hours please visit our website under 'Contact Us'. It's free to call, and you'll be put straight through to a Shark representative. You'll also find online support at support.sharkclean.co.uk/.

The Shark representative will go through some troubleshooting with you, and if we conclude that the item has failed, we will send you a replacement part or a returns label to send the defective item back to us free of charge. When you have delivered the defective product to us, we will send you a replacement.


Please remember that the item will need to be boxed when you return it to us, which can be any suitable box; it does not have to be the original packaging.

Where can I buy genuine Shark spares and accessories?

Shark spares and accessories are developed by the same engineers who developed your Shark Fan appliance. You'll find a full range of Shark spares, replacement parts and accessories for all Shark machines at sharkclean.co.uk. Please remember that damage caused by the use of non-Shark spares may not be covered under your guarantee.

REGISTER YOUR PURCHASE

sharkclean.uk/register-guarantee
Scan QR code using mobile device.

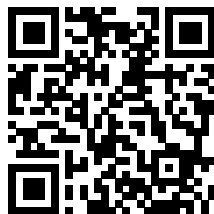

Benefits of registering your product and creating an account:

- Get easier, faster product support and access to warranty information
- Access troubleshooting and product care instructions
- Be among the first to know about exclusive product promotions

TIP:

You can find the model and serial numbers on the QR code located on the back of your unit.

RECORD THIS INFORMATION

Model Number:

Serial Number:

Date of Purchase (Keep receipt):

Store of Purchase:

TECHNICAL SPECIFICATIONS

Voltage: 220-240V~ 50-60Hz

Watts: 90W

PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

This Instruction Guide is designed to help you get a complete understanding of your new Shark® Fan.

SharkNinja Europe Ltd,
1st/2nd Floor Building 3150,
Thorpe Park, Century Way,
Leeds, England, LS15 8ZB
sharkclean.co.uk

SharkNinja Germany GmbH,
Rotfeder-Ring 9,
60327 Frankfurt am Main,
Germany
sharkclean.eu

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

© 2024 SharkNinja Operating LLC. SHARK is a registered trademark in the United Kingdom of SharkNinja Operating LLC.



TF200SUK_QSG_241219 (LL)



@sharkhomeUK