Shark®
WANDVAC DELUXE

Rechargeable handheld
vacuum cleaner

WV501UK Series

OWNER'S GUIDE



Thank you for buying this Shark product.

- **Before using the vacuum cleaner, please read this manual thoroughly and be sure to use the vacuum cleaner correctly and safely.**
- **Please keep this manual in a safe place.**

This manual applies to: WV501UK Series

Specifications

Frequency	50Hz/60Hz
Voltage	AC230V
Rated power consumption	205W
Continuous operating time	
• Eco Mode	Approximately 40 minutes
• Normal Mode	Approximately 20 minutes
• Boost Mode	Approximately 8 minutes
Charging time	Approximately 3.5 hours
Weight when in use	Approximately 680g*

*When battery is installed in unit

CONTENTS

Introduction
Included items ····· 3
Safety warnings ····· 4

Preparation for use
Charging dock assembly ····· 6
Charging ····· 7
About the lithium-ion battery ····· 8

How to use
Operation ····· 9
Using accessories for cleaning ····· 10

Maintenance
Emptying the dust cup ····· 12
Cleaning the dust cup ····· 12
Cleaning the filter ····· 13
Troubleshooting ····· 14

Other
Replacement parts and accessories ····· 16
Warranty and registration ····· 17


INCLUDED ITEMS

- Ⓐ Wand
- Ⓑ Duster Crevice Tool
- Ⓒ Upholstery Tool
- Ⓓ Motorized Hand Tool


*Installed in the vacuum cleaner at time of shipping.

- Ⓔ Battery
- Ⓕ Charging dock
- Ⓖ Accessory stand


A

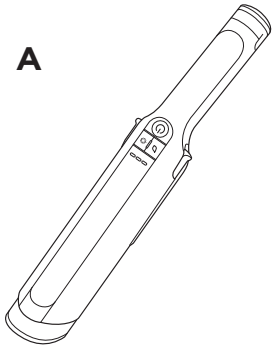


E



F

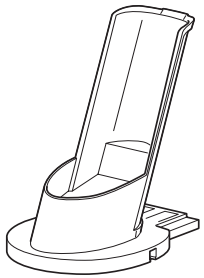


G

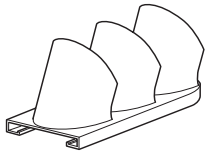


B



C

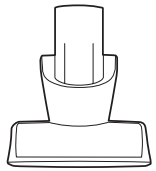

D

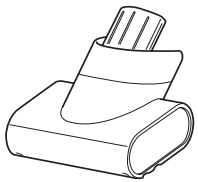

SAFETY WARNINGS

This product is intended for home use. Do not use the vacuum cleaner for commercial purposes or for purposes other than cleaning.

The following are guidelines to prevent injury and property damage to the user or others.

If the power plug cannot be inserted into the outlet, turn it the other way and reinsert. Contact customer support if the plug does cannot be inserted properly into the outlet even when turned the other way. Do not force the plug into the outlet or alter the plug to make it fit.

WARNING **(Death or serious injury can result if the vacuum cleaner is used incorrectly.) Follow the instructions below to reduce the risk of fire, electric shock, injury, or physical damage.**



WARNING **Do not use the vacuum cleaner to vacuum up water or other liquids.**

WARNINGS ABOUT POWER SUPPLIES, INCLUDING ELECTRIC WIRES, CHARGERS, AND VACUUM CLEANERS

1. This product does not contain parts that can be repaired by customers.
2. Do not vacuum up liquids.
3. Do not remove the filter or dust cup or expose the parts of the vacuum cleaner to water or other liquids.
4. Stop using the vacuum cleaner if it becomes damaged.
5. To avoid fire, explosion, or injury, prior to using the vacuum cleaner, inspect the vacuum cleaner and charger and ensure that they are not damaged. Stop using the vacuum cleaner if any parts are damaged.
6. Do not use outdoors or on wet surfaces. Only use the vacuum cleaner on dry surfaces.
7. Do not use the vacuum cleaner if it does not work normally, or if it is dropped, damaged, left outside, or submerged in water.
8. Do not handle the vacuum cleaner or the power supply plug with wet hands.
9. Do not leave the vacuum cleaner with the power on.
10. Do not place the vacuum cleaner in places where its surface could heat up.
11. Make sure to turn off the power to the vacuum cleaner before connecting it to the charger.
12. To charge the vacuum cleaner, use the included charging dock with charging adapter (XDCKWV501UK), sold separately. Do not use batteries other than XSBT330EU. There is a risk of fire if other parts are used. Charge the vacuum cleaner in a flat, stable area.
13. Do not dispose of the vacuum cleaner by burning it even if it is severely damaged. The lithium-ion battery may explode in fire.

GENERAL USE

14. Do not carry the charger by its cord. When removing the vacuum cleaner from the outlet, always do so by holding the power supply plug itself. Do not remove from the outlet by pulling on the cord.
15. Do not let the charger cord come into contact with warm surfaces.
16. Be sure to use the vacuum cleaner as described in the manual. Do not use the vacuum cleaner for any purpose other than those explained in this user manual.
17. Use the vacuum cleaner in well-lit locations.
18. To prevent malfunction when attaching and removing the charger, dust cup, filter, and other accessories, be sure to turn off the power to the vacuum cleaner.
19. Do not place foreign objects inside the suction port or openings.
20. Do not use the vacuum cleaner if its opening is blocked. Remove any objects that may obstruct the flow of air, such as dirt, lint, or hair.
21. Individuals with physical, sensory, or cognitive disabilities, or those who lack sufficient experience or knowledge (such as children) should not use this product except under the supervision or guidance of someone who is responsible for their safety.
    a) Children should not play with the vacuum cleaner.
    b) Children should not clean or perform maintenance on the vacuum cleaner except under the supervision of a guardian.
22. Do not use the vacuum cleaner if the dust cup and filter are not properly attached.
23. Do not use the vacuum cleaner if the suction pathway is blocked. If there is a foreign object inside, turn off the power to the vacuum cleaner, remove all foreign objects, and turn the power back on.
24. While the vacuum cleaner is running, do not put your hair, face, fingers, feet, or any loose clothing near any of its openings.
25. Use only genuine Shark®accessories.
26. Do not charge the battery at temperatures under 10° C (50° F) or over 40° C (104° F). Charging inappropriately or in environments where the temperature is higher or lower than the specified range may damage the battery, increasing the risk of fire.
27. Store the vacuum cleaner and accessories indoors where the temperature will not fall below 3° C (37.4° F). When using, make sure that vacuum cleaner is at room temperature.

DUST CAP, FILTER, AND ACCESSORIES

Check the following before turning the vacuum cleaner on.

28. After performing maintenance on the filter, make sure to fully dry it before reinstalling it in the vacuum cleaner to ensure that water does not get inside the electrical components.
29. After preforming regular maintenance on the dust cup and filter, make sure that they are properly installed.
30. Please ensure that the accessories are not clogged and do not allow your hair, face, or body to come into contact with the openings.
31. Do not use any filters or accessories except genuine Shark® products. The warranty will be voided if non-genuine parts are used.

GENERAL CLEANING

32. Do not vacuum up the following items.
    a) Liquids
    b) Large objects
    c) Hard objects and sharp objects (glass, nails, screws, coins, rocks, etc.)
    d) Large quantities of dust (drywall dust, fireplace ashes, cinders, flour, etc.). Do not use the vacuum cleaner as an attachment to an electric dust collection tool.
    e) Objects that are smoking or on fire (hot coals, cigarette butts, matches, etc.)
    f) Flammable or combustible items (diesel oil, gasoline, kerosene, etc.)
    g) Toxic substances (chlorine bleach, ammonia, drainpipe cleaner, etc.)
33. Do not submerge the vacuum clear in water or other liquids.
34. Watch your step when cleaning stairs.


BATTERY USAGE

35. The battery is the vacuum cleaner's power source. To prevent malfunction, when carrying the vacuum cleaner, make sure the power is off and that your fingers are not touching the power button. Do not charge the vacuum cleaner when the power is on.
36. Please always use the charger packaged with the vacuum cleaner to charge it. If a non-genuine charger is used, there is a risk of fire.
37. When using the vacuum cleaner, use only the lithium-ion battery packaged with the product. Use of another battery could result in injury or fire.
38. Mishandling the battery could cause electrolytic solution to leak out. This liquid could cause inflammation or burns, so do not touch this liquid. If the liquid sticks to your skin or clothing or gets into your eyes, seek immediate medical attention after washing it off with water.
39. Store the vacuum cleaner indoors. To preserve the life of the battery, do not store the vacuum cleaner in locations where the temperature is less than 3° C (37.4° F) or more than 40° C (104° F).
40. Do not expose the vacuum cleaner or battery to flame or temperatures above 130° C (266° F), as explosion could result.
41. This product does not contain parts that can be repaired by customers. Do not modify or repair the vacuum cleaner or the battery. Do not use the vacuum cleaner if it has been modified or damaged.


sharkclean.co.uk

ASSEMBLY OF THE CHARGING DOCK


1.

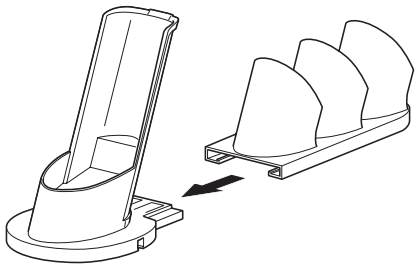


2.

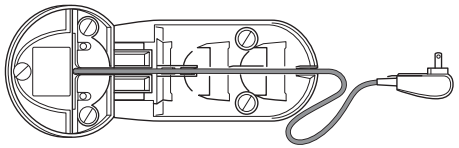

3.

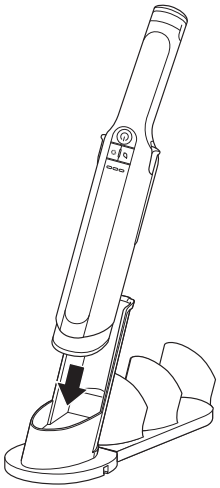

4.

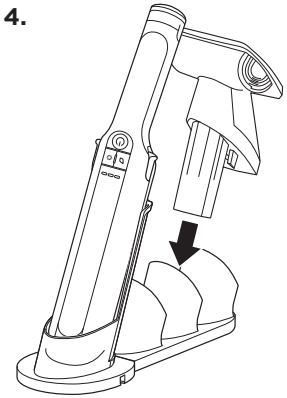

1. Insert the accessory stand from the back of the charging dock, slide, then push it until you hear a click.

2. Feed the charging adapter cord through the groove in the bottom of the charging dock and the accessory stand and pull cord through the notch to the rear.

3. Slide the vacuum cleaner into the opening in the base of the charging dock and stand it up.

4. Insert accessories into the opening on top of the accessory stand.


To use the vacuum cleaner appropriately, make sure that all parts are securely connected and fitted in the proper locations.

NOTE: To ensure the stability of the charging dock, make sure to attach the accessory stand to the charging dock when using.

NOTE: In order for the vacuum cleaner to rest securely in the charging slot of the charging dock, make sure to insert accessories into their specified slots. See “Using for the first time” for information about storage positions.


CHARGING

CHARGING IN THE CHARGING DOCK

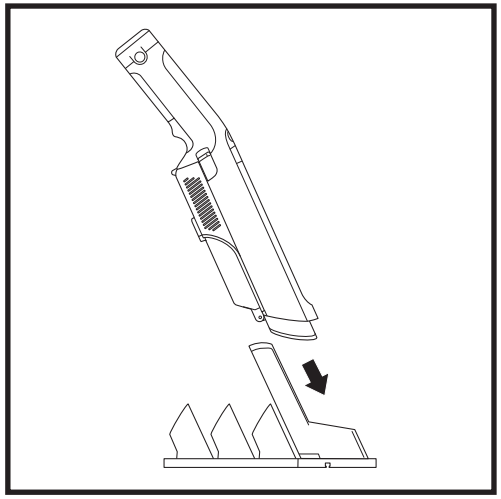

Insert the charging adapter into a wall outlet, etc.


Insert the nozzle end of the vacuum cleaner into the charging dock by sliding it in. Charging will begin automatically.

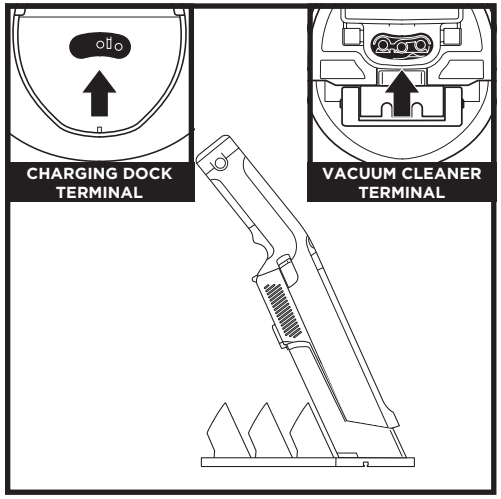

Make sure that the charging terminal of the vacuum cleaner nozzle is firmly in contact with the charging terminal of the charging dock.

Remove the vacuum cleaner from the charging dock to begin using the vacuum cleaner once charging is complete.

INSERTING AND REMOVING THE BATTERY

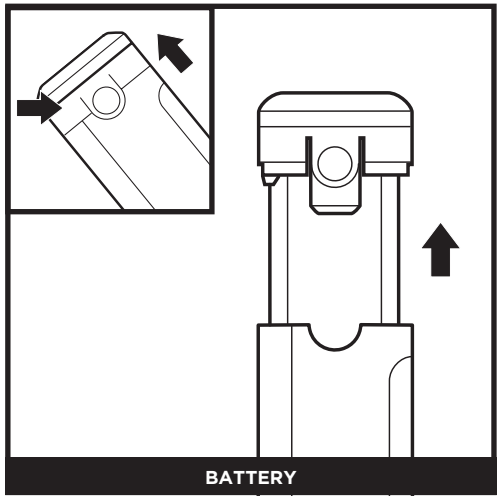

To remove the battery from the vacuum cleaner, pull the battery out while pressing the tab on the cap of the battery. To reinstall it, insert the battery into its original location by sliding it and push until you hear a click.

NOTE: When the vacuum cleaner is inserted into the charging dock, the indicator lights on the vacuum cleaner will flash, indicating that charging has begun. When charging is complete, the three lights will all light, then turn off approximately five minutes later.

NOTE: At time of purchase, batteries are shipped in approximately half-charged condition. To maximize the possible operation time, before first using the vacuum cleaner, please fully charge the battery (this takes approximately 3.5 hours). After beginning to use the vacuum cleaner, the battery life will not be harmed even if the vacuum cleaner is left constantly charging.


ABOUT THE LITHIUM-ION BATTERY

Fully charge the battery before first using the vacuum cleaner. It will take approximately 3.5 hours to fully charge the battery for the first time.

CONTINUOUS OPERATION TIME WHEN THE BATTERY IS FULLY CHARGED

The maximum continuous operation time with one fully charged battery is 40 minutes.

CHARGING STATUS AND REMAINING BATTERY LIFE ACCORDING TO INDICATOR LIGHT DISPLAY

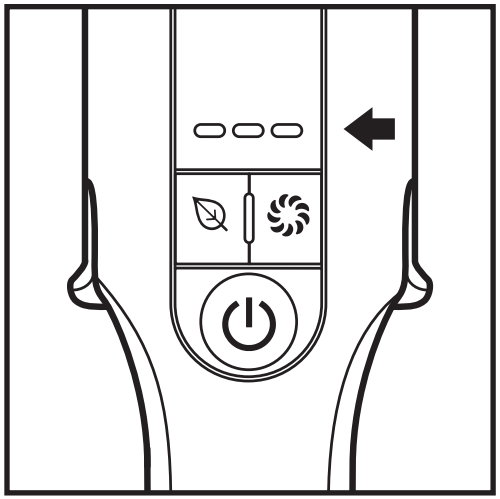

In use

- Fully charged
- Approximately half of battery life remaining
- Battery nearly fully discharged
- Charging cut off or no battery life remaining

When charging

- No battery life
- Half battery life
- Close to fully charged
- Fully charged

NOTE: The indicator lights will turn off approximately five minutes after the battery is fully charged.


RECYCLING THE LITHIUM-ION BATTERY

When replacing the lithium-ion battery, dispose of or recycle it in accordance with the local collection rules where you live. Depending on the region where you live, lithium-ion batteries are collected in different ways. Either take the battery you wish to dispose of to a center that collects items for recycling or to the store where you bought the product, or recycle it after contacting the municipality where you live.

NOTE: Like normal lithium-ion batteries, the maximum charge capacity of the Shark rechargeable battery will lessen over the years relative to a new product with 100% capacity.


HOW TO USE

BUTTON FUNCTIONS

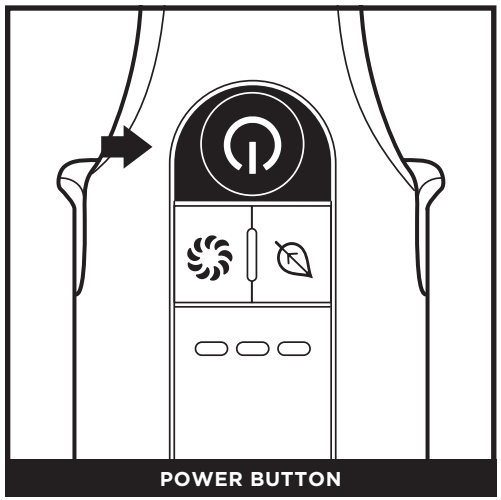


POWER BUTTON

To turn on the power of the vacuum cleaner, press the power button on the handle. To turn the power off, press the button again. (Normal Mode)

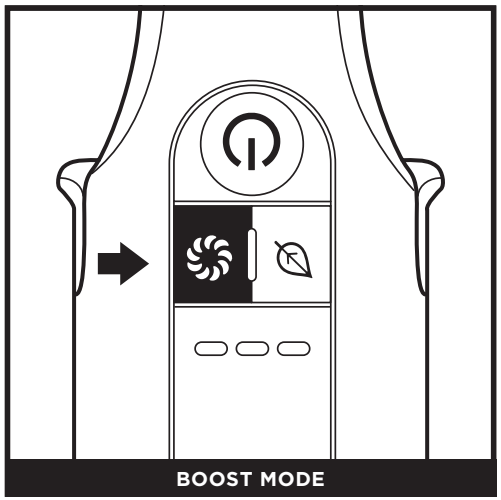


BOOST MODE

To change to Boost Mode, which provides more powerful suction, press the Boost button. To return to Normal Mode, press the button again.

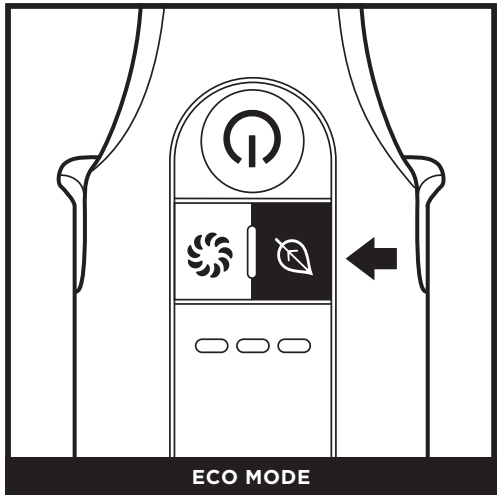

ECO MODE


Press the Eco button to switch to change to Eco Mode, in which the device makes less noise when running. To return to Normal Mode, press the button again.

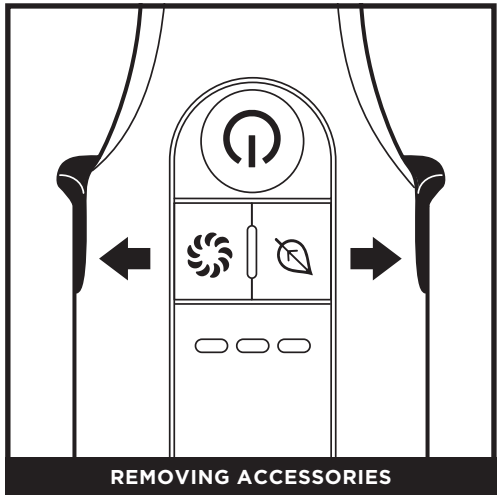

REMOVING ACCESSORIES

To remove accessories that have been installed on the vacuum cleaner, lift the tabs on either side of the handle. After the tabs are lifted, the accessory will be pushed out slightly in front and can be easily removed.

INSTALLING AND REMOVING ACCESSORIES

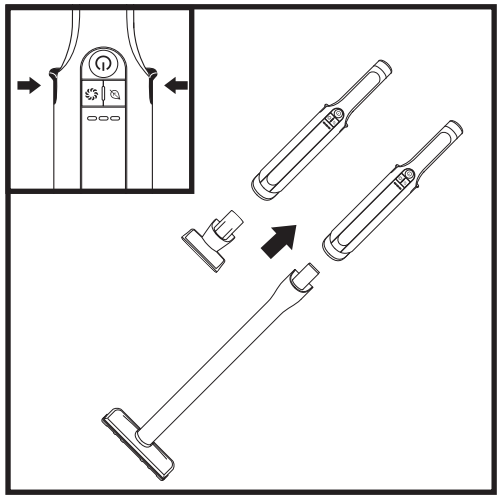

To install accessories on the vacuum cleaner, insert them by sliding them into place on the nozzle opening side.
To remove accessories, lift the grips on either side of the handle.
After the grips are lifted, the accessory will be pushed out slightly in front and can be removed easily.


NOTE: Some accessories may not be included with the vacuum cleaner you have purchased. For details, please see “Included items” on page 3. Go to sharkclean.co.uk to order replacement parts and accessories.

USING INCLUDED ACCESSORIES




Duster Crevice Tool

A nozzle for crevices with a brush that can be pulled out.
Suitable for cleaning corners of rooms, baseboards, crevices in furniture, car interiors, and other small spaces.

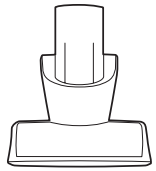

Upholstery Tool


Suitable for cleaning fine dust from fabric furniture surfaces, etc.

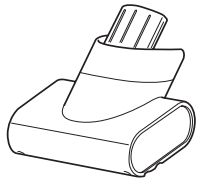


Motorized Hand Tool

Suitable for removing allergens, dirt, and hair from various surfaces using a powerful motor.

EMPTYING THE DUST CUP

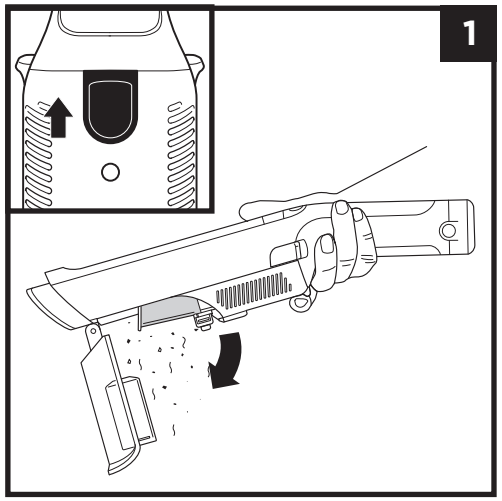


1. With the power off, hold the dust cup over a trash can. Slide the debris disposal button on the bottom forward to open the dust cup.

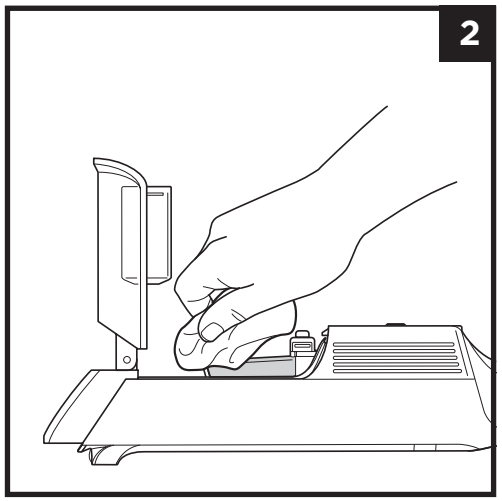


2. As needed, use a dry cloth to remove clumps of debris and clinging dirt.

CLEANING THE DUST CUP

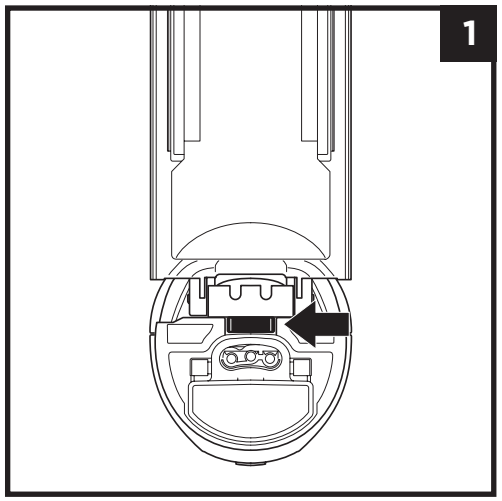


1. With the power off and the dust cup open, press the release button on the bottom of the dust cup.

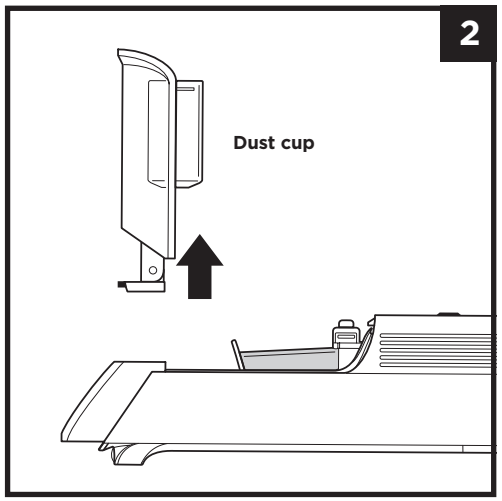

NOTE: Do not wash parts and accessories in a dishwasher.


CLEANING THE DUST CUP (CONTINUED)

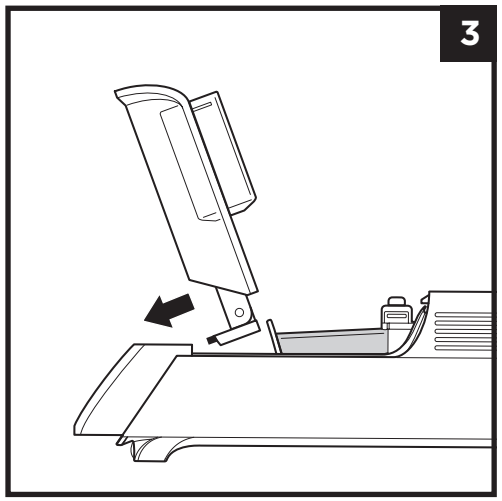


3. To reattach, insert the dust cup into the slot on the bottom of the nozzle by sliding it and push until you hear a click.

NOTE: Clean the dust cup regularly to maintain suction power and to facilitate ease of use, particularly when using the active floor nozzle and wand.

CLEANING THE FILTER

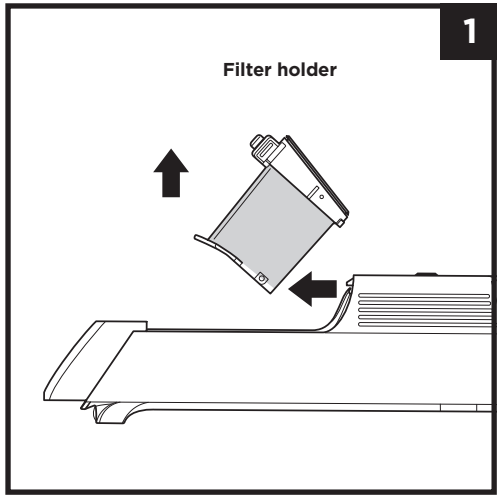

1. With the power off, holding the vacuum cleaner horizontally, remove the filter holder by lifting it up with the dust cup open.

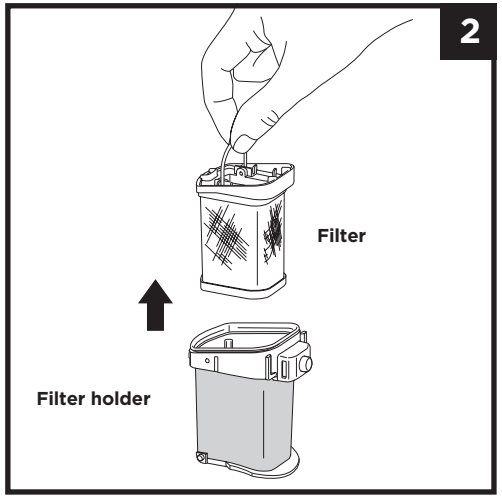

2. Above a trash can, hold the metal ring and pull the filter out of the filter holder. Lightly tap the filter and filter holder to remove debris and dust and then rinse the filter and filter holder with water. When reinstalling the filter and filter holder, make sure that the filter is completely dry before installing it in the vacuum cleaner. Drying time will vary depending on the season and environment. If the filter is used when not fully dry, it may become moldy or cause the vacuum to malfunction.

TROUBLESHOOTING

⚠ Warning: To reduce the risk of electric shock and malfunction of the vacuum cleaner, be sure to turn the power off and remove the battery before proceeding.

Power to the vacuum cleaner turns off.

There are several possible reasons if the power to the vacuum cleaner turns off by itself including obstruction of the suction pathway, an issue with the battery, overheating, and so on. In this case, try the following steps.

1. Turn on the power to the vacuum cleaner and check the indicator lights. If the battery needs to be charged, before charging it in the charging dock, ensure that the power button on the vacuum cleaner is turned off.
2. Empty debris in the dust cup and clean the filter (for details, see “Emptying the dust cup” and “Cleaning the dust cup” on page 12 and “Cleaning the filter” on page 13.
3. Check to see if the vacuum cleaner or the suction port of an accessory is obstructed by a foreign object. Remove any objects you may find.
4. If the vacuum cleaner or the battery has overheated, let it stand for at least 45 minutes until it has cooled to room temperature.
5. Press the power button to run the vacuum cleaner.

The vacuum cleaner does not suck up debris. Suction is weak.


- The dust cup is full: Remove the debris and empty the dust cup.
- Check whether debris is caught in the nozzle: Remove any stuck debris as needed.
- Check whether the suction pathway of the vacuum cleaner or an accessory is obstructed by a foreign object: Remove any stuck foreign objects as needed.
- Check to see if the filter is dirty. For instructions on installing the filter and drying it after removing and washing it, see “Cleaning the filter” on page 13.

A liquid has been vacuumed up by mistake.

- This could cause an electric shock, short circuit, fire, etc. Promptly turn off the power to the vacuum cleaner and remove the battery from the vacuum cleaner.
- Use a soft cloth or towel to wipe down all areas of the vacuum cleaner suction port that may have gotten wet and let dry for at least 24 hours until fully dry.
- Remove the dust cup, filter holder, and filter from the vacuum cleaner, clean with water, wipe off any moisture with a towel or soft cloth, and let dry for at least 24 hours until fully dry.
- Check that all the parts are fully dry, install the parts and battery, and test the operation of the vacuum cleaner. If something unexpected occurs, for instance if there is a strange odor or the vacuum cleaner fails to operate, turn off the power immediately, remove the battery, and contact customer support.

TROUBLESHOOTING (CONTINUED)

Reasons why the indicator lights of the vacuum cleaner are flashing and solutions


Indicator light status	Reason	Solution
The three indicator lights are all flashing white 	The battery is not seated firmly in the vacuum cleaner	If possible, try using another battery. Insert the battery into the vacuum cleaner by sliding it until you hear a click. If the issue is still not solved, contact customer support.
The first and third LEDs are blinking 	The vacuum cleaner may have overheated	Let the vacuum cleaner and battery cool for approximately 45 minutes until they reach room temperature.
The first and second LEDs are blinking 	Excess current or short circuit	Turn off the power, remove any stuck debris, and turn the power back on.
The first LED is blinking 	Remaining battery charge is low	Charge the battery by placing the vacuum cleaner on the charging dock.
The second LED is blinking 	The motor may be overloaded	Turn off the power and check whether debris is caught in the suction port, etc. If there is any debris stuck within, remove it and turn the power back on. If the problem is still not resolved, contact customer support.
The third LED is blinking 	Conduction failure	Contact customer support.
The second and third LEDs are blinking 	It is possible that the charging dock may be malfunctioning	Use the included genuine Shark charging dock. If the issue is still not resolved, contact customer support.
The first and third LEDs are blinking alternately with the second 	The filter may not be seated properly	With the dust cup open, remove the filter holder by lifting it out and pull the filter from the filter holder, holding it by the metal ring. Firmly reseat the filter in the filter holder, return the filter holder to its original position, and close the dust cup. If the issue is still not resolved, contact customer support.

NOTE: If you have carried out the above troubleshooting steps and the vacuum cleaner is still not functioning normally, contact customer support.


REPLACEMENT PARTS AND ACCESSORIES

- **A Duster Crevice Tool**
- **B Upholstery Tool**
- **C Motorized Hand Tool**
- **D Filter**
- **E Battery**
- **F Battery charger (for standalone charging)**


A

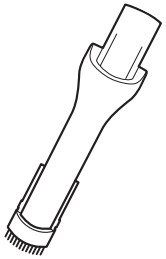


B

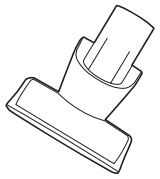


C

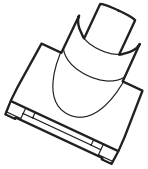

D

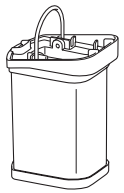

E



F



NOTE: Visit sharkclean.co.uk to order replacement parts and accessories.

Shark NINJA

TWO-YEAR LIMITED GUARANTEE

When a consumer buys a product in the UK, they get the benefit of legal rights relating to the quality of the product (your "statutory rights"). You can enforce these rights against your retailer. However, at Shark we are so confident about the quality of our products that we give you an additional manufacturer's guarantee of up to two years (1 year as standard plus 1 year when you register). These terms and conditions relate to our manufacturer's guarantee only - your statutory rights are unaffected.

Every Shark machine comes with a free parts and labour guarantee. Our customer service helpline (0800 862 0453) is open from 9.00am to 6.00pm Monday - Friday. It's free to call, and you'll be put straight through to a Shark representative. You'll also find online support at www.sharkclean.co.uk.

How do I register my extended Shark® guarantee?

You can register your guarantee online within 28 days of purchase. To save time, you'll need the following information about your machine:

- Model Number
- Date you received the machine (from your in-store receipt or delivery note)

To register online, please visit www.sharkclean.co.uk/register-guarantee

Products purchased directly from Shark are automatically registered.

IMPORTANT

- The manufacturer's guarantee covers your product for 12 months (or for 2 years, if registered) starting on the date of delivery.
- Please keep your receipt at all times. Should you need to use your guarantee (standard 1 year or further 1 year extended) we will need your receipt to verify the information you have supplied to us is correct. The inability to produce a valid receipt may invalidate your guarantee.

How long are new Shark machines guaranteed for?

Our confidence in our design and quality control means that your new Shark vacuum cleaner is guaranteed for a total of two years (12 months plus an extended guarantee of 1 year).

What is covered by the free Shark guarantee?

Repair or replacement of your Shark machine (at Shark's discretion to decide whether to replace or repair) including all parts and labour. A Shark guarantee is in addition to your legal rights as a consumer.

What is not covered by the free Shark guarantee?

1 Blockages - for details of how to unblock your vacuum cleaner, please refer to the Instructions.

2 Normal wear and tear with parts which require regular maintenance and/or replacement to ensure the proper functioning of your unit.

3 Accidental damage, faults caused by negligent use or care, misuse, neglect, careless operation or handling of the vacuum cleaner which is not in accordance with the Shark Instructions supplied with your machine.

4 Use of the vacuum cleaner for anything other than normal domestic household purposes.

5 Use of parts not assembled or installed in accordance with the operating instructions.

6 Faulty installation (except where installed by Shark).

Where can I buy genuine Shark spares and accessories?

Shark spares and accessories are developed by the same engineers who developed your Shark vacuum. You'll find a full range of Shark spares, replacement parts and accessories for all Shark machines at www.sharkclean.co.uk.

Please remember that damage caused by use of non-Shark spares is not covered by your manufacturer's guarantee. However, your statutory rights are unaffected.

REGISTER YOUR PURCHASE

Sharkclean.co.uk/register-guarantee/

+44 (0)800 862 0453

Scan QR code using mobile device

RECORD THIS INFORMATION

Model Number: _____

Serial Number: _____

Date of Purchase: _____
(Keep receipt)

Store of Purchase: _____

NOTE: The model number and serial number can be found by checking the label on the vacuum cleaner.

Please read the manual fully and keep it in a safe place.
This manual is intended to help you make use of all features of your Shark rechargeable handheld vacuum cleaner for many years to come.

If you have any questions, please call customer support.

SharkNinja Europe Limited
3150 Century Way
Thorpe Park, Leeds
LS15 8ZB, UK
0800 862 0453
sharkclean.co.uk

SharkNinja Germany GmbH,
c/o Regus Management GmbH,
Excellent Business Center 10.+11. Stock,
Westhafenplatz 1,
60327 Frankfurt am Main,
Germany

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.

© 2026 Shark Ninja Operating LLC. SHARK and SHARK WANDVAC are registered trademarks of SharkNinja Operating LLC.

WV501UK_IB_EN_MP_Mv4
PRINTED IN CHINA

@Sharkcleaninguk

@Sharkcleanuk

@Sharkcleanuk